

HOME DECORATORS COLLECTION


BF-25298 MADISON WALL MOUNTED LAUNDRY
DRYING RACK 30"Hx36"W x10"D

INV#27923

ASSEMBLY INSTRUCTIONS







Made In China

Max Limit:10lbs

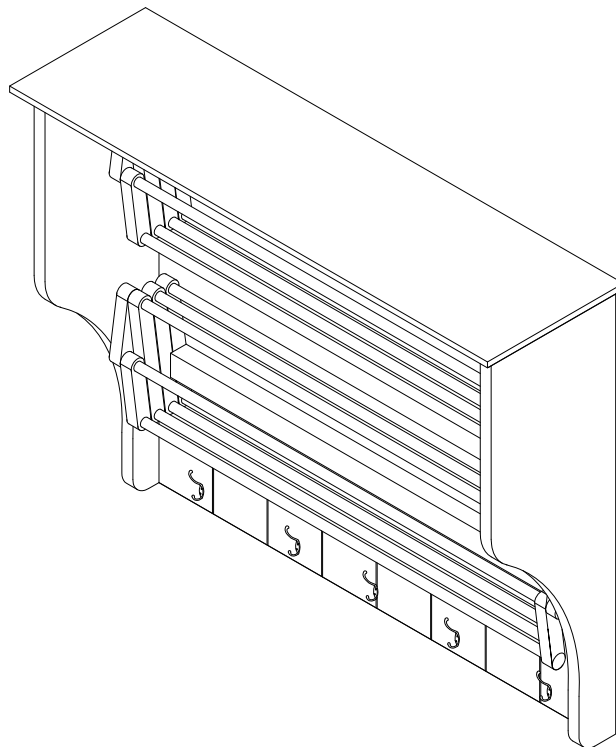


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

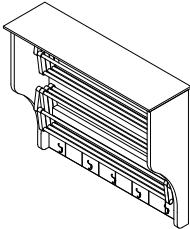


PARTS LIST		
<div>A</div> <div></div> <div>RACK-1PC</div>	<div>B</div> <div></div> <div>SHEET IRONS-2PCS</div>	<div>C</div> <div>6mm× 1/2"</div> <div></div> <div>SCREWS-8PCS</div>
<div>D</div> <div></div> <div>GECKOS-8PCS</div>	<div>E</div> <div>7mm× 7/8"</div> <div></div> <div>SCREWS-8PCS</div>	<div>F</div> <div></div> <div>EVA PADS-2PCS</div>

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

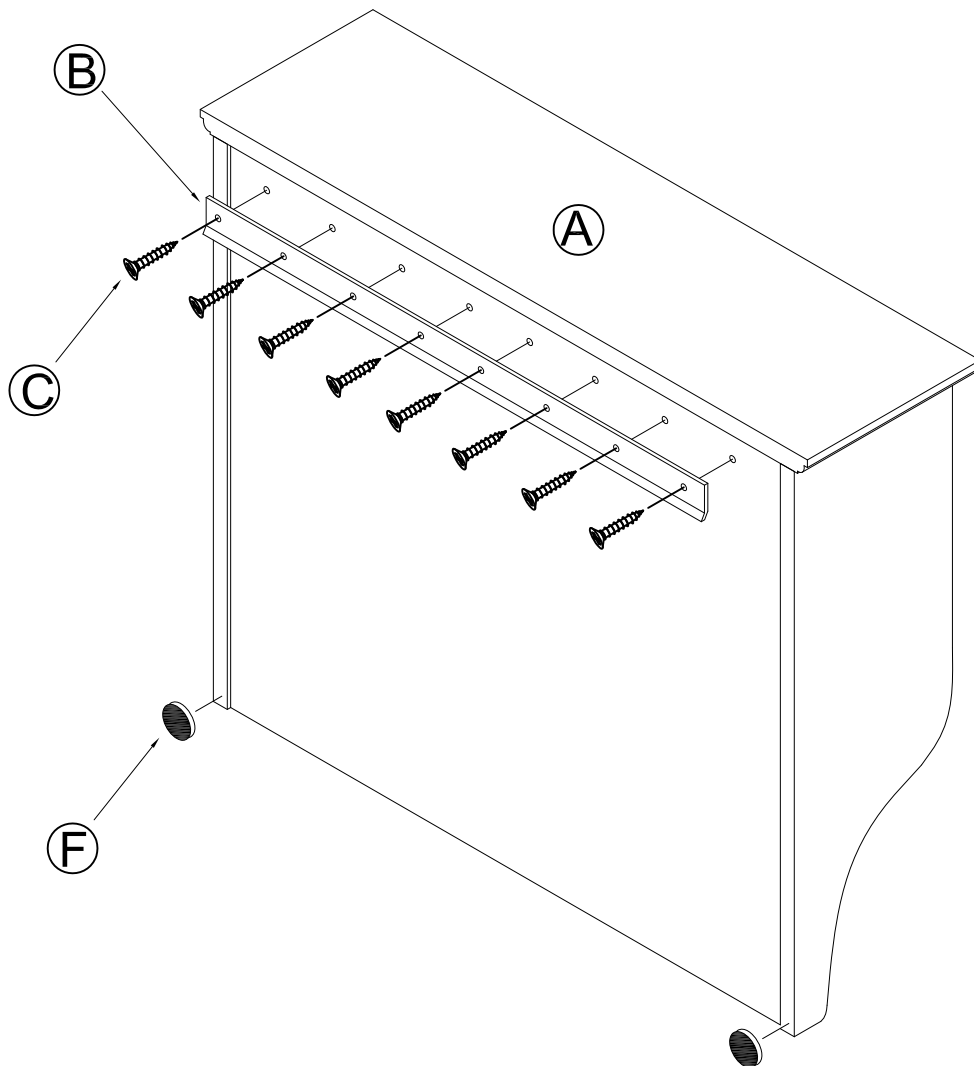

1). ASSEMBLE THE SHEETIRON(B) AND EVA PADS(F).

- ATTACH THE SHEETIRON(B) TO RACK(A) USING 8 SCREWS(C).
- ATTACH 2 EVA PADS(F) TO RACK(A).

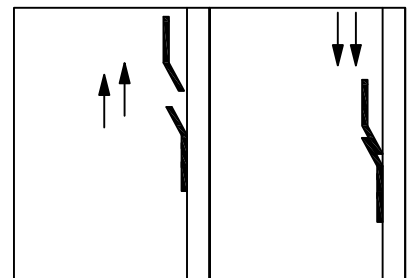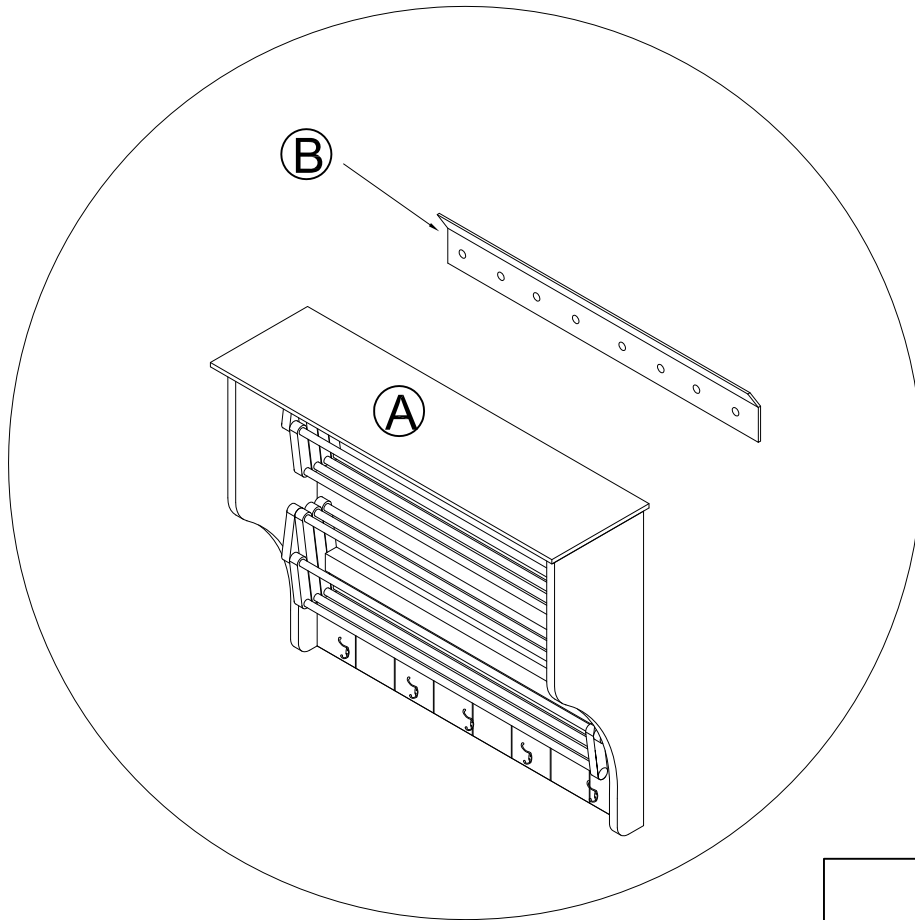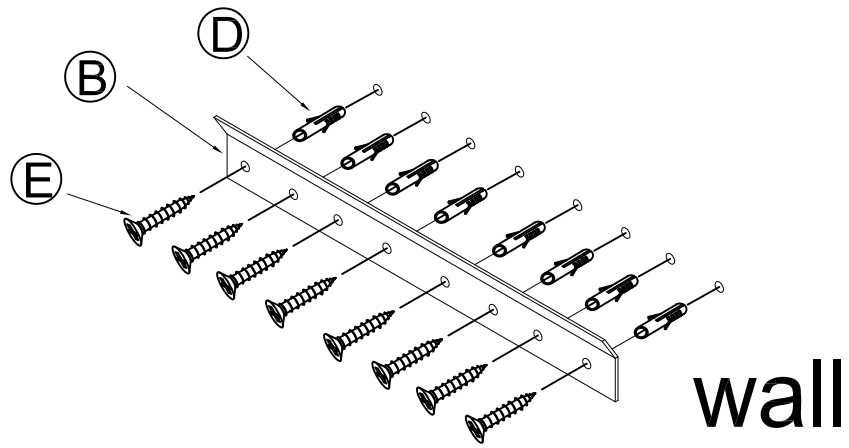

2). ASSEMBLE THE GECKOS(D).

- DRILL 8 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 8 GECKOS(D) INTO THE HOLES ON THE WALL. THEN ROTATE 8 SCREWS(E) INTO THE GECKOS(D).
- HANG THE RACK(A) ONTO THE SHEETIRON(B).